

SYLVANIA

MODEL NO. SBT1100

BLUETOOTH FM AUDIO TRANSMITTER
FOR THE CAR W/HANDSFREE CALLING

INSTRUCTION MANUAL



PLEASE READ BEFORE OPERATING THIS EQUIPMENT
Sylvania Inc. used under license SYLVANIA is a registered trademark of OSRAM.

4. Bluetooth calling

In the music playing mode, when there is an incoming call, this unit will automatically switch to telephone mode.

1. Please press the "Answer the Call button⑦" to answer incoming call.
2. Please press the "hang up button⑤" to hang up a call.
3. Please press the "Answer the Call button⑦" twice to dial the last number.

5. AUX Input / AUX Output

Aux Input: Use the audio cable (not included) to connect MP3/MP4 players or other external device and the other end connect to the "Aux input/ Aux output ⑩".
Aux Output: Use the audio cable (not included) to connect external speaker's Aux in port and the other end connect to the "Aux input / Aux output ⑩", this unit can be used as a card reader.

6. Charge Function

There are dual USB Charging ports⑪ and⑫, one for 5V 2.1A and the other for 5V 1A. The different current is for different devices charging. USB Port ⑧ is not intended for charging purpose.

7. Playing Mode Switch

While playing audio, short press M/⏸ button ③, you can pause or play again. Long press M/⏸ button ③, you can switch audios source from Bluetooth, TF card, USB flash drive or Aux input.

4

Introduction

The **SBT1100** Bluetooth FM Transmitter utilizes Bluetooth 4.2 technology and equips three USB ports: one for USB music file playing; two designed for charging (iOS and Android devices) In addition, it supports TF card and AUX Input. **SBT1100** provides multi-solutions for your hands-free driving and in-car stereo streaming. Smart phone could be connected to SBT1100 through Bluetooth and then streamed through car FM system.

Read before use

1. The transmitter will connect to the pre-set phone automatically when turns on.(Keep mobile phone's Bluetooth active).
2. For the best audio quality, find a least interfered frequency and adjust to find an ideal volume for the FM transmitter (Volume 15 is usually good).
3. If the noise is too much, please try other vacancy FM frequency or use the Aux In port
4. The transmitter will power off automatically without any operation in 5 minutes(without flash drive or TF card in), you need to long press the multi-function button for 2 seconds to turn it on again.
5. Never disassemble the product, which will void its warranty and cause safety concern.

1

Quick Guide


Operation Guide	On FM transmitter
1. Set frequency	Press"CH+"button④ : increase the frequency Press"CH-"button ② :decrease the frequency
2. Choose music	Short press VOL+/⏮ button⑦ : play the next audio. Short press ⏮ /VOL- button⑤ : play the previous audio.
3. Play and pause the music	Short press M/⏸ button ③ .
4. Answer/hang up the call	Press answer the call button ⑦ / hang up button⑤
5. Adjust the volume	Long press VOL+/⏮ button: volume up Long press ⏮ /VOL- button② : volume down
6. Reject a call	Press hang up button⑤
7. Private call answer	Long press button⑦ for three seconds, you can answer the call privately, instead of via the Bluetooth.

LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

5

Product Diagram

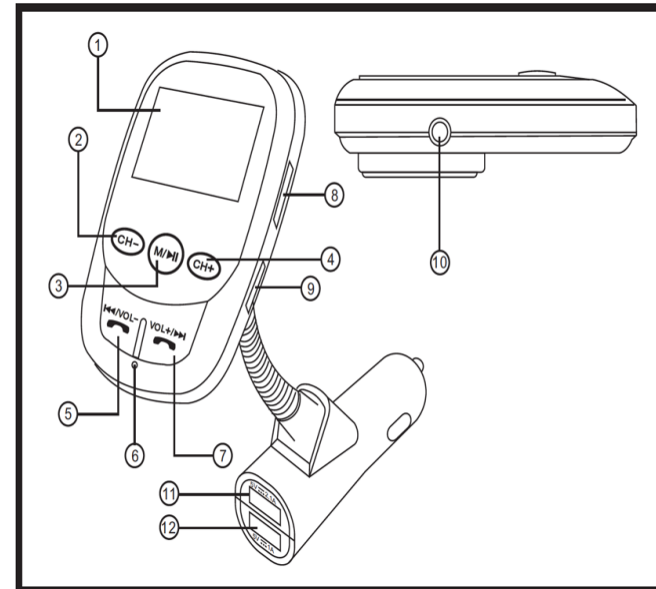

- | | |
|----------------------------|---|
| ① Display screen | ⑦ Answer the call/pause Next /volume up |
| ② Frequency (channel) down | ⑧ USB port (for reading files) |
| ③ Multi-function button | ⑨ TF card slot |
| ④ Frequency (channel) up | ⑩ Aux input / Aux output |
| ⑤ Hang up/power off | ⑪ Charge USB1 |
| ⑥ Microphone | ⑫ Charge USB2 |

2

Should you have any problem with this product, please and it is highly recommended to visit our website at www.curtisint.com before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and allover warranties, conditions, representations or guarantees, including any warranties, conditions,

representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

6

Specifications

FM Frequency Range: 88.1~107.9MHz
Frequency Stability:± 10ppm
Product Input: 12-24V
USB Charger Output: 5V/3A (total)
TF Card Slot and USB Reader Support
Music Format: MP3, WMA
TF Card and USB Flash Drive (Max capacity): 32GB
FM Operating Distance: about 5M

Operation Instruction

1. FM Transmitter Set-up

- 1). Plug this device into your car cigarette lighter, it will turn on automatically;
- 2). Tune your radio to a vacant FM frequency, then adjust this device to sync the same frequency (via "CH+"button④ and "CH-"button②).
(please find a least interfered vacant frequency, in order to achieve least noise upon sync)

2. TF Card and USB Flash Drive

Insert your TF card into TF card slot ⑨ or insert USB flash drive into USB reader port ⑧, it will play your MP3/ WMA audio automatically.

3. Bluetooth Phone Set-up

Using Bluetooth for the first time, you need to pair your mobile phone with this unit. Activate your mobile phone's Bluetooth function, then detect and pair this unit (SYLVANIA SBT1100).

3

TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be mailed to:

Canada
C.I. Service Dept.
7045 Beckett Drive, Unit 15
Mississauga, ON
L5S 2A3

U.S.A
Curtis International Ltd
c/o Lotus International Company
6880 Commerce Blvd.
Canton MI 48187
U.S.A.

For service assistance and product information, please call: 1-800-968-9853.

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

To begin the **warranty repair process**, please note that you **MUST** obtain a **return authorization number** prior to returning your product for warranty based support. This can be placed under the 1-800-968-9853 contact line.

Model No. _____ Date Purchased _____ Serial No. _____

©Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com